

S&S[®] Cycle, Inc.
14025 County Hwy. G Box 215
Viola, Wisconsin 54664 U.S.A.
Phone: 608-627-1497 Fax: 608-627-1488
www.sscycle.com

Technical Services Phone: 608-627-TECH (8384)
Technical Services Email: sstech@sscycle.com



Because every industry has a leader

Installation Instructions for All S&S Non-Copper V² and Twin Cam Cylinder Head Gaskets

NOTE - Cleaning parts prior to and during assembly and keeping parts clean after final assembly are imperative to minimize contaminants that may circulate in oil and shorten engine life. Many parts can be cleaned with soap and water first. Then, reclean all internal parts and gasket mating surfaces using high quality solvent that does not leave any harmful residues. Be sure to read and follow manufacturer's instruction label before use. Use brushes and compressed air to clean all oil passageways of dirt, filings, etc. whenever possible. During final assembly, recoat all internal parts with clean motor oil.

CAUTION - Installer is responsible for ensuring parts are clean at assembly. Damage caused by manufacturing chips, dirt and/or other contaminants is not covered under warranty.

WARNINGS

- Some solvents, degreasers and other chemicals are harmful. Many items are flammable and present a fire hazard. Read manufacturer's instruction label for proper use. Use in well ventilated area and wear protective clothing when using them to avoid personal injury.
- Compressed air and particles dislodged by compressed air are harmful to eyes and body. Wear protective goggles when using compressed air and always direct air stream away from body parts such as hands and eyes. Never direct compressed air toward other people.

Top End Assembly Procedure

- A. Thoroughly clean all top end parts and blow dry with compressed air. Use high grade lacquer thinner on gasket surfaces.
- B. Install base gaskets dry. Be sure gaskets match cylinder base line up dowels and oil return passageways.
- C. Install pistons and rings per OEM instructions, or S&S piston instruction sheet #51-1028.
- D. Coat piston skirts with engine oil and install cylinders.
- E. Install head gaskets dry with widest side of metal fire ring against cylinder.

NOTE - Stock Twin Cam 88" engines (3-1/2" bore) use o-ring seals around the head dowels. Big Bore Twin Cam engines (3-7/8" bore or larger) do not use o-rings around the head dowels, the gaskets are cut to fit close around the dowels.


NOTE - All S&S cylinder head kits are supplied with .045" thick head gaskets. This clearance promotes better combustion chamber turbulence and flame travel.

CAUTION - Insufficient clearance between piston domes and cylinder heads or piston domes and valves will cause damage to pistons, heads and/or valves.

- F. Before installing heads, spin each head bolt down on its respective stud to be sure threads are clean and free of contamination. Place a drop or two of oil on threads of each head bolt just prior to final assembly.

NOTE - Light coating of oil on head bolt threads minimizes friction so torque values will not be distorted. It cannot be emphasized enough how important it is to do these steps carefully. Maintaining a good head gasket seal depends on it.

- G. Bolt heads on cylinders using stock H-D washers and head bolts or S&S washers and head bolts when provided. Tighten head bolts in stages using crossing pattern shown below. Use torque specifications appropriate for crankcase type. Do not exceed specified torque values

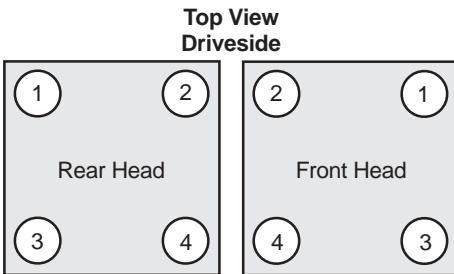

Head Bolt Torquing Sequence

	S&S Crankcases	Stock Crankcases
Stage 1	7-9 ft-lbs.	7-9 ft-lbs
Stage 2	16-18 ft-lbs.	12-14 ft-lbs.
Stage 3	Turn 90° More	Turn 90° More

NOTE - Stock H-D head bolt torque specifications must be used with stock H-D crankcases. Stronger material used in S&S crankcases allow the use of higher torque values.

CAUTION - Improper torquing sequence and head bolt torque values may cause head gasket failure. Exceeding specified torque values may cause cylinder studs to pull out of crankcases, resulting in damage to crankcases and loss of head gasket seal.

- H. Finish assembling top end per OEM instructions. Install and adjust pushrods per OEM instructions, or S&S pushrod instructions #51-1035

Engine Break In

- A. Upon initial start-up, quickly check to make sure oil pressure is normal and no leaks exist. With minimal load on engine, ride motorcycle at low speeds until cylinder head temperature reaches about 250°. Do not crack throttle or subject engine to any heavy load during this period as V² head gaskets are susceptible to failure until heat build-up is completed. Heat build-up is necessary to cause heads and cylinders to expand and seal. Improper initial engine start-up and break-in procedure may cause head gasket failure.

CAUTIONS

- **Improper first time engine start-up and break-in procedure may cause head gasket failure.**
- **Do not allow engine temperature to become excessive as permanent engine damage may result.**

- B. First 50 miles are most critical for new rings and piston break-in. Most engine damage will initially occur during this period. Keep heat down by not exceeding 2500 rpm. Vary speed. Do not lug engine.
- C. Next 500 miles should be spent running engine no faster than 3500 rpm or about 50-55 mph. Do not lug engine and continue to vary speed.

CAUTION - Lugging or running engine prematurely at high rpms may result in damage to pistons and/or other engine components. Damage resulting from improper break-in is not covered under warranty.

- D. For balance of first 1000 miles, highway speeds of 60 to 70 mph are allowed. Continue to run engine at all different speeds including lower 40-45 mph ranges.
- E. 1000 to 2000 miles—basically same procedures as before. You can be a little more liberal with rpm range. Avoid overheating engine and putting any hard strain on it (drag racing, trailer towing, sidecar operation).
- F. After 2000 miles, break-in period complete. Change oil and resume regular maintenance schedule.